

24x Sagem Adapter Liste:

1. My 100x,
2. My 200x, 201x
3. My C-2
4. My C2-2
5. My **C2-3**, C2-3m
6. My C-3, C-3b
7. My **C3-2**, C4-2
8. My **C-4**, C-5W, SG 321i, SG 322i, S-7, WONU-S1
9. My C5-2
10. My C5-2v, **C5-2m**
11. Mx X-1, X-1w, X-1t, X-1wt, X-3, X3-2, **X-5**, X-5m, X2-2, X2-2m
12. My **X-2**, X-2q, T-22
13. My X-4
14. My X5-2, X5-2v, X-55, X5-5, **V-55**, V56, SG 341i, SG 342i
15. My **X-6**, X-7, V-65, V-75
16. My X-8
17. WONU-S3
18. **VS-1**, VS-2
19. VS-3
20. Z-5, **Z-55**
21. My 500c, 501c
22. My 501x
23. My 400z, 401z
24. My 213x

(Das fett markierte ist das was auf dem Adapter steht)